

Isuzu Industrial Diesel Engine Serial Number Location

Isuzu Model Designation	Serial Number Location
2CA1 3CA1 3CB1 3CD1 3CE1	Left side, lower center of block between front engine mount and starter.
3YA1 3YC1	Right side of block above injection pump.
2KC1 - QT-15 3KC1 - QT-23 3KR1 - QT-35	Right front, on injection pump mounting flange.
2AB1 - QD-27 3AB1 - QD-40	Right front, top part of block.
3LA1 3LB1 3LD1 / 2 4LB1 4LC1 4LE1 / 2	Right front, top part of cylinder block. Between the first injection pump and front cover.
C240 - QD-60	Left front, top part of cylinder block.
4JA1 - QD-63 4JB1 - QD-70 4JC1 - QD-55 4JG1 / 2 4JJ1	Left rear, top part of cylinder block.
4BB1 - QD-90 4BC2 - QD-85 4BD1 - QD-100 4BG1	Left front, top part of cylinder block.
6BB1 - QD-130 6BD1 - QD-145 6BF1 6BG1 - QD-165	Left front, lower part of cylinder block.
4HK1	Right center, lower part of cylinder block.
6HK1	Right front, top part of cylinder block below number one exhaust port.
6SA1 - QD-170	Left rear, top part of cylinder block.
6SD1 - QD-195	Left center, lower part of cylinder block.
6UZ1	Left center, lower part of cylinder block.
E120 - QD-200 6RB1 - QD-250	Right side of cylinder block, below injection pump and to the rear of the filter.
6WG1	Left front, top part of cylinder block in front of injection pump.

Note: All directions are as viewed from the flywheel end of the engine. All serial numbers are stamped and consist of six numerical digits. Engine Model is cast on the side of the block and/or located on the identification label, which is found on the valve cover.